



# How to replace a filter container

To replace the filter container we need two measurements.

Take the diametre measurement of the top of the storage container  
Measure from the inside of the ceramic wall to the inside of the other wall

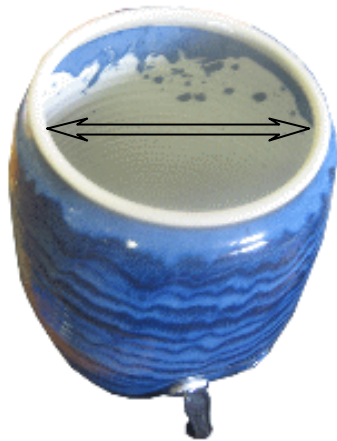

Take the diametre measurement of the lid  
Measuring from outside edge to the other outside edge

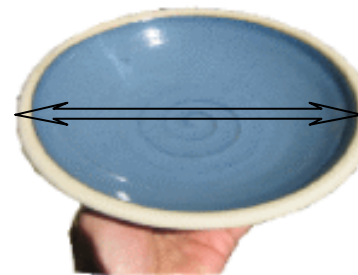

Along with the two diametre measurements we need to know the glaze colour or design of the system.